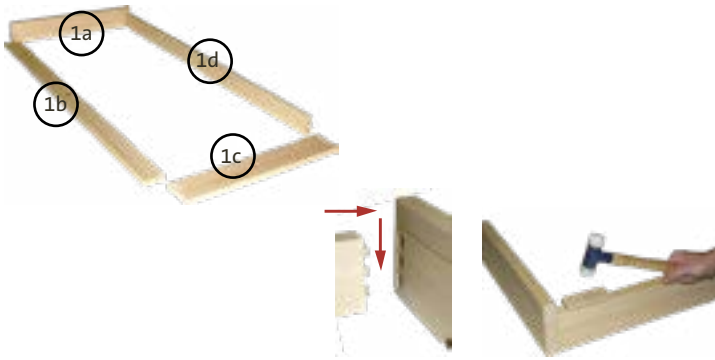
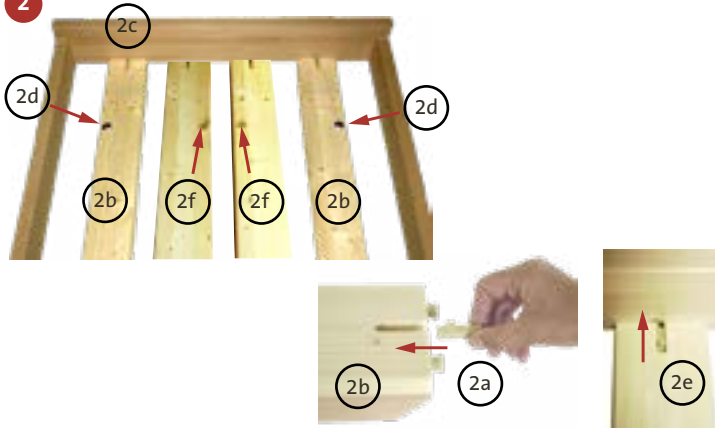
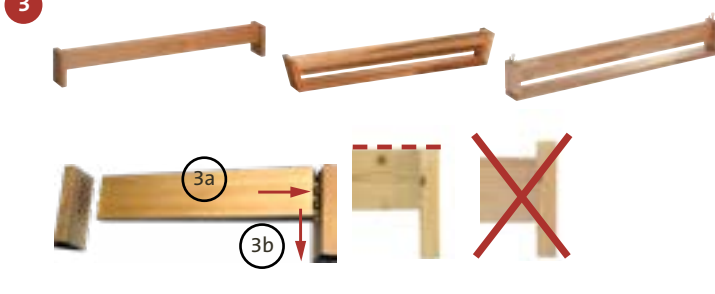
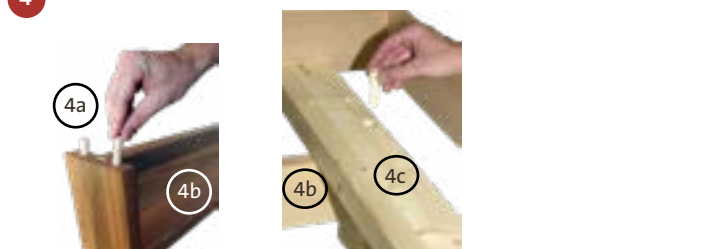
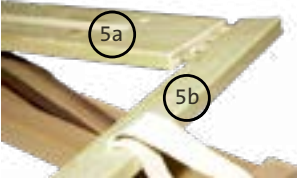

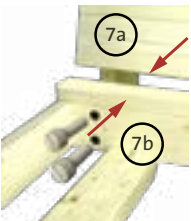


Assembly instructions bedstead Couch

<p>1</p> 	<p>Frame</p> <ul style="list-style-type: none"> Assemble frame sections (1a, 1b, 1c, 1d). The Hüsler Nest logo on the parts for the side of the bedstead (1b, 1d) face inwards. <p>Headboard (optional)</p> <ul style="list-style-type: none"> Position section (1a) with screw holes for headboard at the head of the bed.
<p>2</p> 	<p>Base</p> <ul style="list-style-type: none"> Insert plastic latches (2a) into the longitudinal supports. Push longitudinal supports (2b) underneath the head and foot sections (2c), assemble and hold in place using plastic latches (2e). Screw holes (2d) must face outwards. For the double couch, the holes (2f) on the two inner longitudinal supports must face inwards.
<p>3</p> 	<p>Leg sections (optional)</p> <ul style="list-style-type: none"> Assemble leg sections (3a) and (3b). Upper edge must be flush. Applies to bench support.
<p>4</p> 	<p>Secure leg sections</p> <ul style="list-style-type: none"> Insert wooden dowels (4a) into the countersunk holes. Place leg sections (4b) underneath the longitudinal supports (4c) and secure with wooden screws (use a coin or wood screwdriver).

Assembly instructions bedstead Couch

<p>5</p> 	<p>Adjustable back and leg rests (optional)</p> <ul style="list-style-type: none"> Apply glue to the two folding sections (5a) and the connecting strips (5b) and join together.
<p>6</p> 	<p>Disassembling the adjustable back and leg rests (optional)</p> <ul style="list-style-type: none"> To disassemble the adjustable back and leg rests (6a), the bolt on the hinge can be knocked out.
<p>7</p> 	<p>Securing the headboard (optional)</p> <ul style="list-style-type: none"> Screw the headboard (7a) to the bed (7b) with 4 wooden screws incl. rubber washers (use a coin or wood screwdriver).

Attaching the headboard: position of the holes in the headboard

